

## Installing The Lock - HDLD



1. Locate the lock and remove the nut.




2. Being with the Bracket Arms removed from the HDLD post.



3. Insert the lock through the square hole in the back of the HDLD. The lock's push button should be on the outside of the HDLD.



4. Ensure that the slot for the key's tab is oriented at the top of the lock.

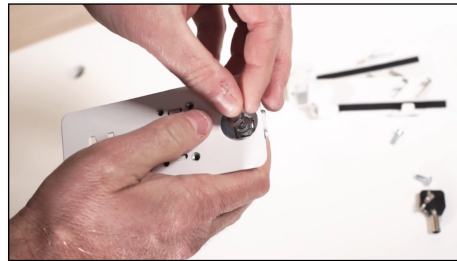

5. While holding the lock in place, turn the HDLD over and set the nut onto the lock.



6. Make sure the nut is not applied at an angle, to prevent cross-threading.



7. Use a 15mm socket to hand tighten the nut. Do not use a wrench handle.



8. Give the nut one last hand turn to ensure the lock is fully secured in place in the HDLD. Use care to avoid damaging the nut or lock.



9. Verify that the lock is secured tightly and does not shift position. This will help ensure that the lock fully engages the top bracket. Test the lock by locking and unlocking it.