

Instruction Guide for Apple HomePod Mini Lockdown - Twin Stud

(Patent pending)

Mechanical Security for HomePod


(Code 950-006)



Installation:



1. Locate baseplate, ring, Allen wrenches, triangle mounting plate, mounting screws (x3), locking nuts (x2), and 2 screws.

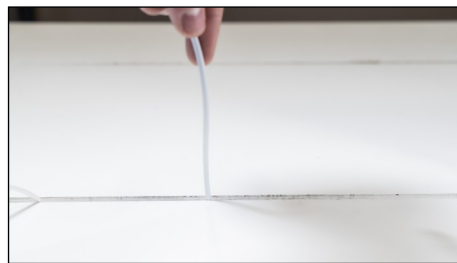

2. Feed HomePod Mini charging cable down through fixture.



3. Insert the two screws to secure ring to baseplate. Tighten with Allen wrench.



4. Set the HomePod Mini Lockdown into position on the fixture.



5. Set triangle mounting plate into position on underside of fixture, and fully tighten the three mounting screws to secure it to fixture. Feed HomePod Mini charging cable through small hole in center of mounting plate. The two mounting studs pass through two corresponding holes in mounting plate. Screw the locking nuts on to the two mounting studs. Use 7/16 or adjustable wrench to fully tighten locking nuts and secure HomePod Mini Lockdown to fixture.



6. HomePod Mini is securely displayed.